

FIG. 1

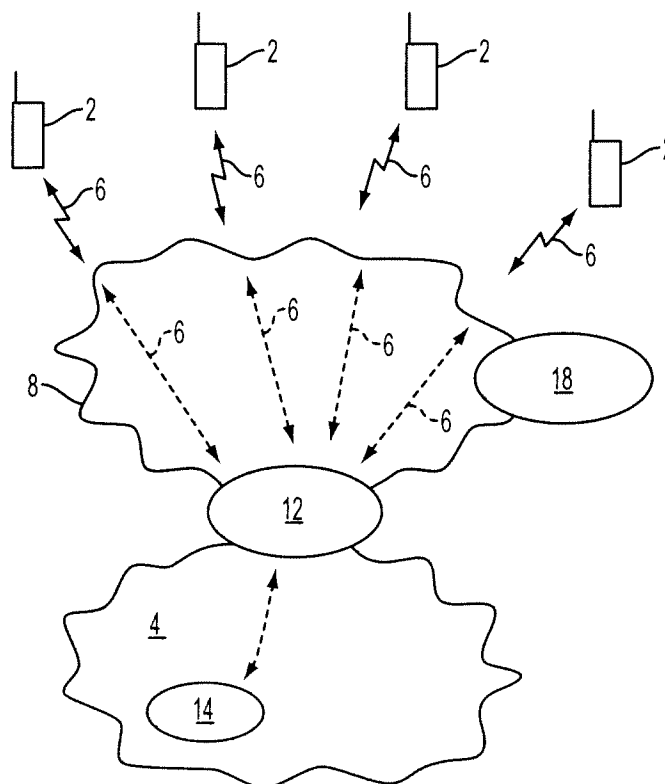


FIG. 2

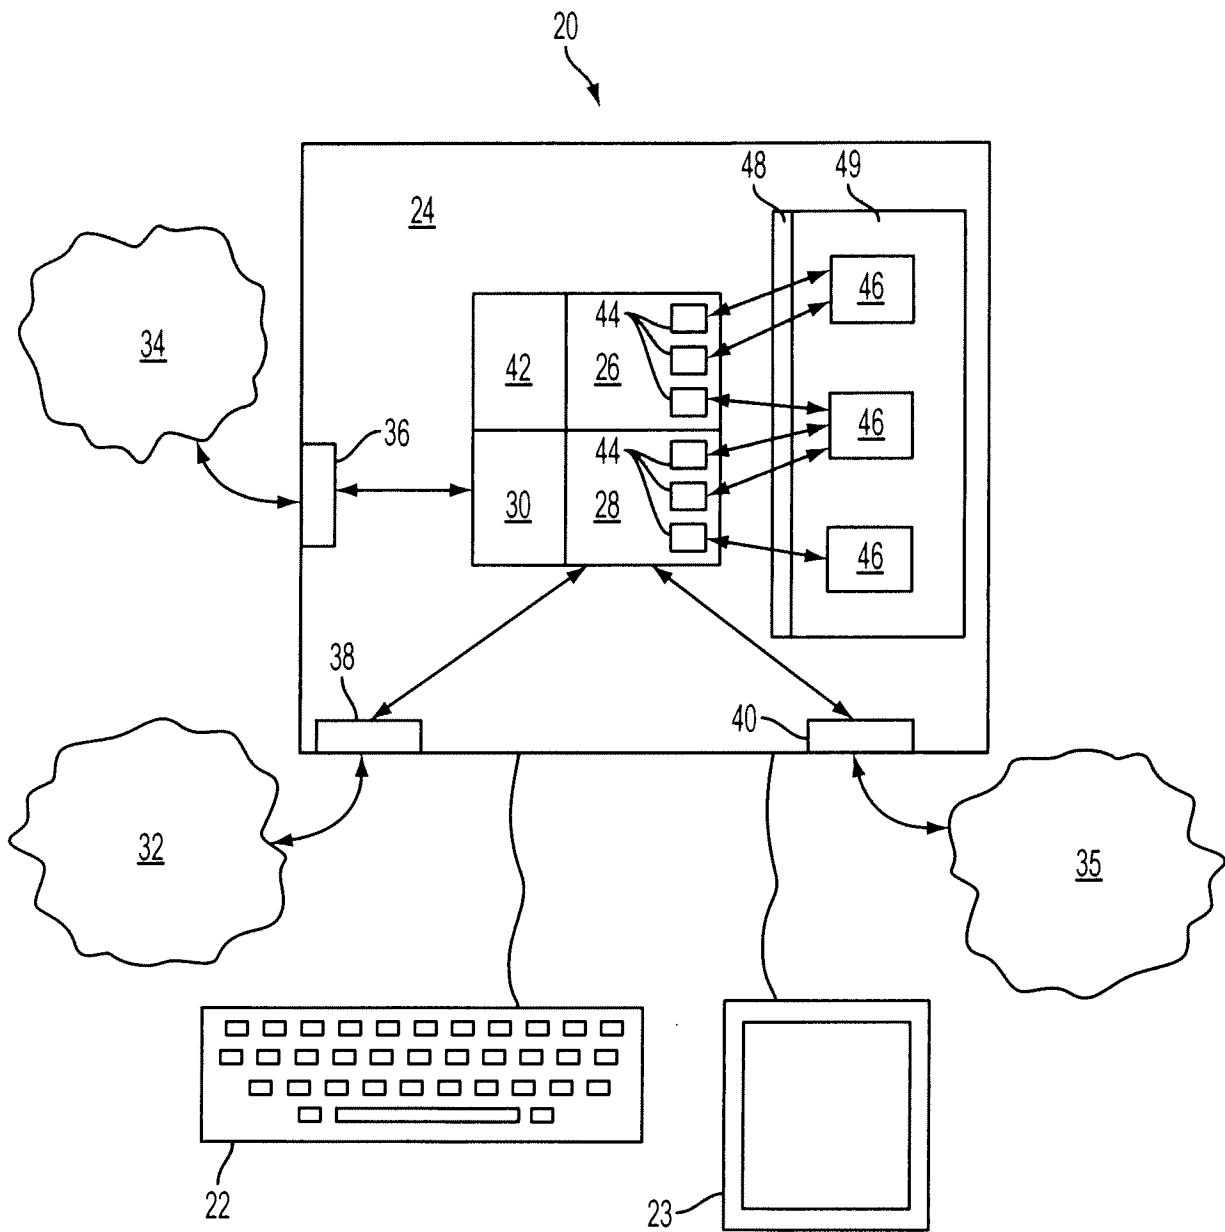


FIG. 3

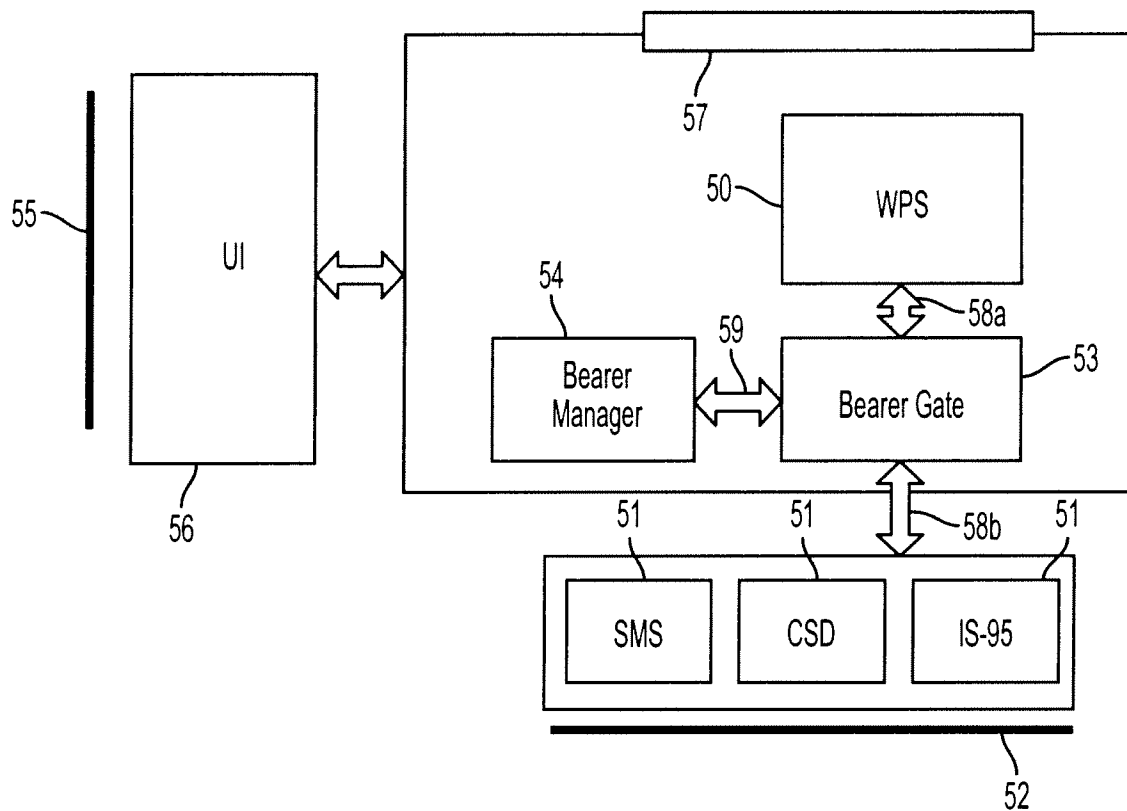


FIG. 4


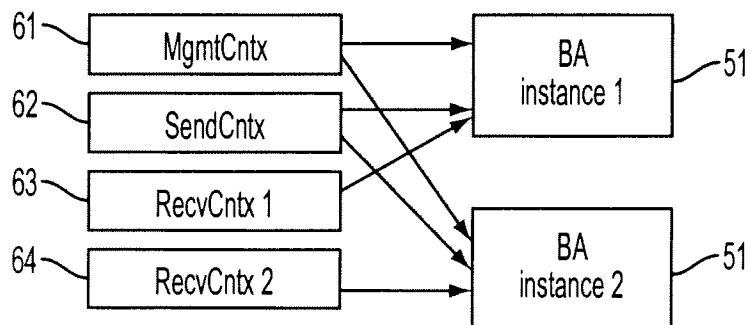


FIG. 5

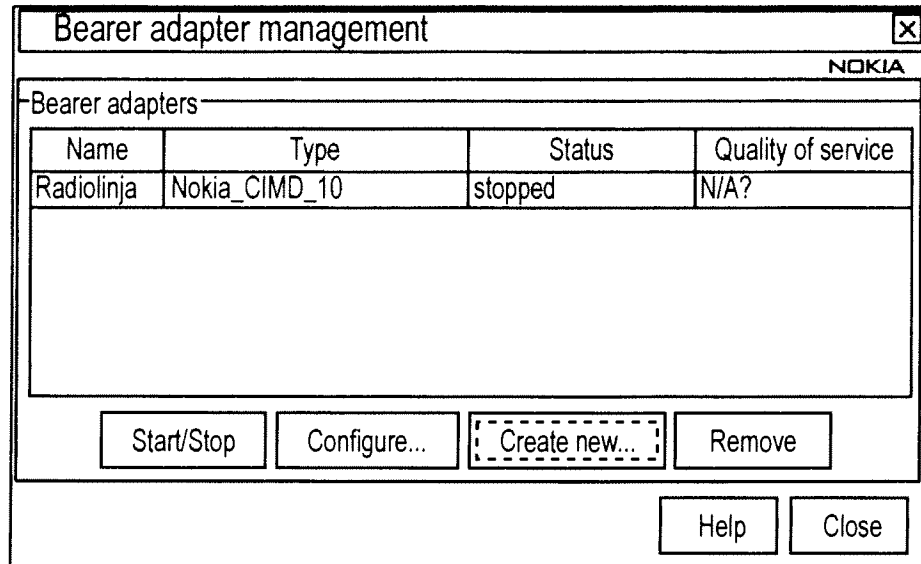


The dialog box is titled "Bearer adapter management" and features the NOKIA logo in the top right corner. It contains a table with the following data:

Name	Type	Status	Quality of service
Radiolinja	Nokia_CIMD_10	stopped	N/A?

Below the table is a large empty rectangular area. At the bottom of the dialog, there are four buttons: "Start/Stop", "Configure...", "Create new..." (which is dashed), and "Remove". At the very bottom right, there are "Help" and "Close" buttons.

FIG. 6a

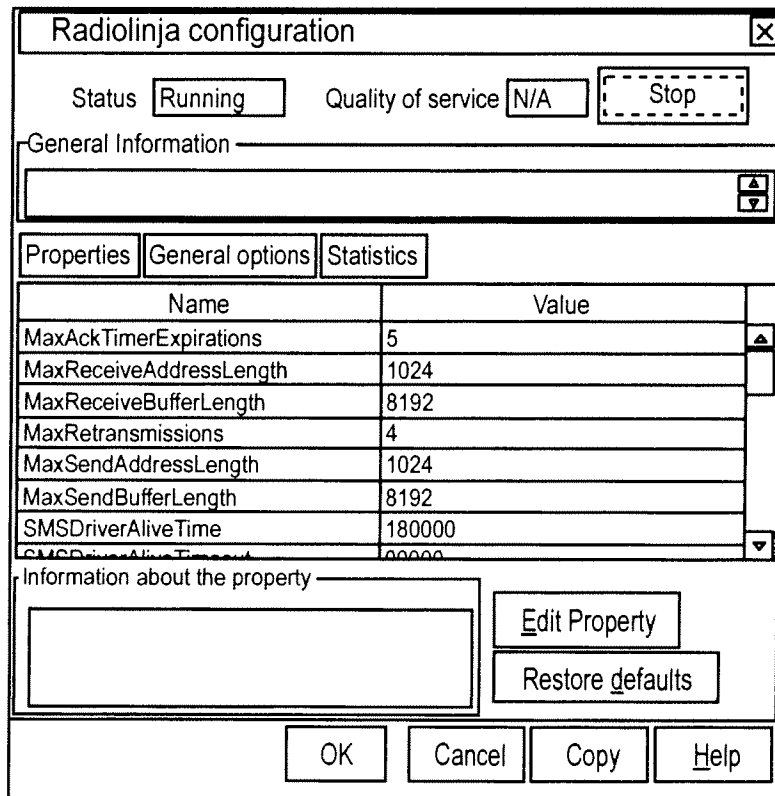

The dialog box is titled "Radiolinja configuration". It has a "Status" field set to "Running" and a "Quality of service" field set to "N/A". There is a dashed "Stop" button. Below these is a "General Information" section with a text area and up/down arrow buttons. A tabbed interface follows with "Properties", "General options", and "Statistics" tabs. The "Properties" tab is active, showing a table of parameters:

Name	Value
MaxAckTimerExpirations	5
MaxReceiveAddressLength	1024
MaxReceiveBufferLength	8192
MaxRetransmissions	4
MaxSendAddressLength	1024
MaxSendBufferLength	8192
SMSDriverAliveTime	180000
SMSDriverAliveTimeout	90000

Below the table is an "Information about the property" section with a text area, an "Edit Property" button, and a "Restore defaults" button. At the bottom of the dialog are "OK", "Cancel", "Copy", and "Help" buttons.

FIG. 6b

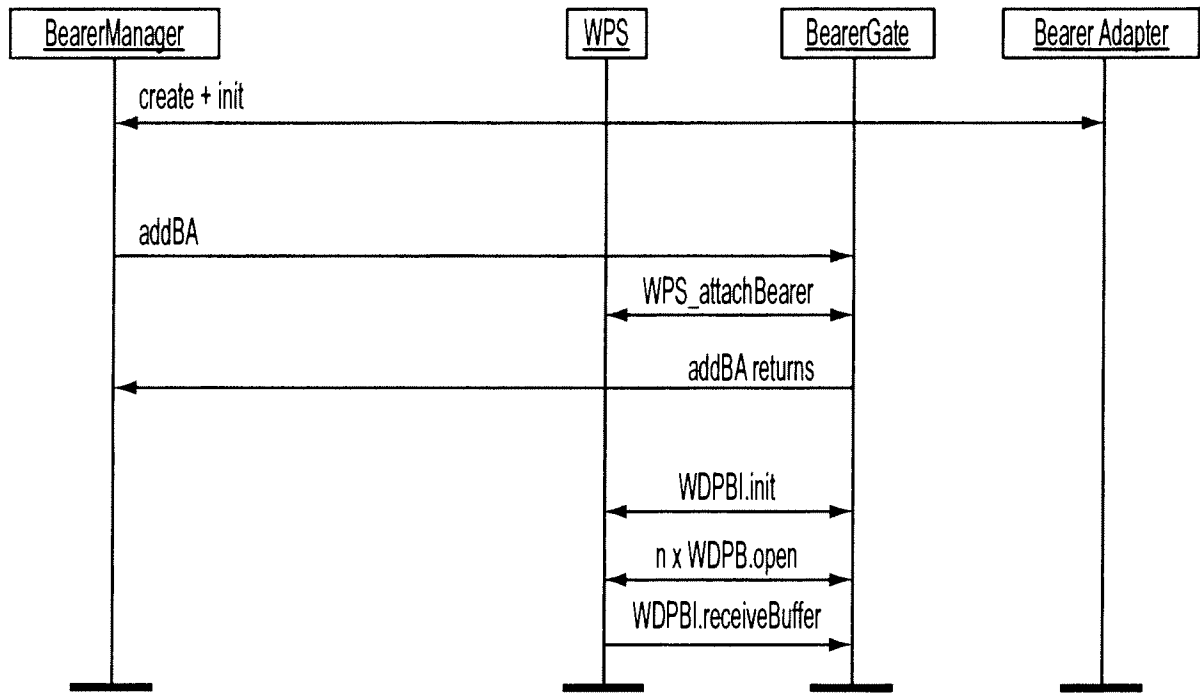


FIG. 7a

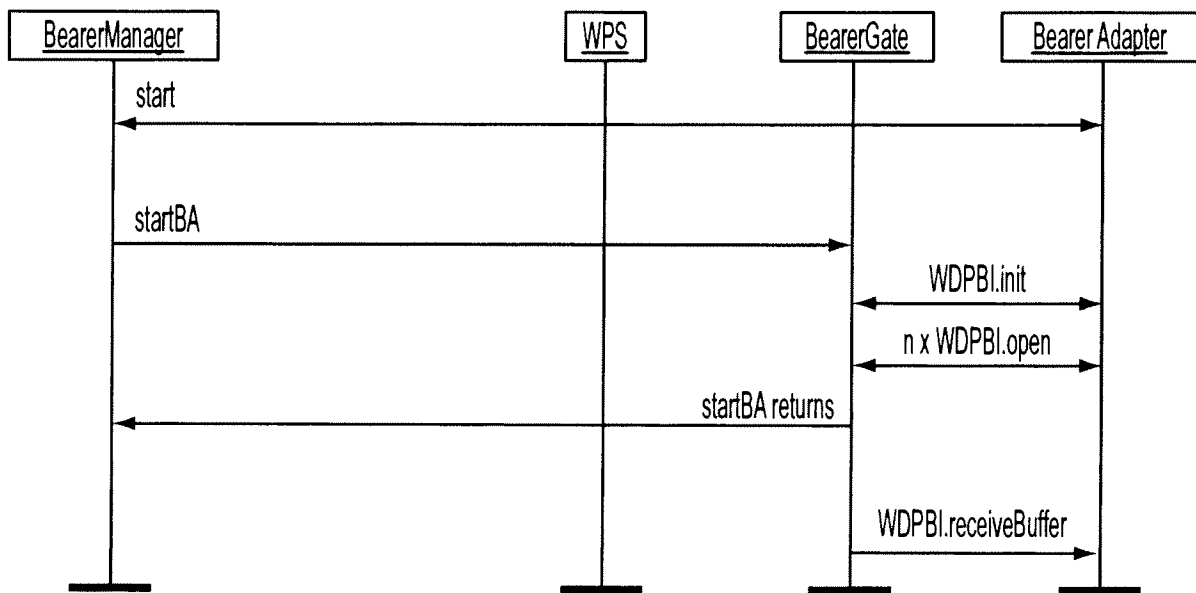


FIG. 7b

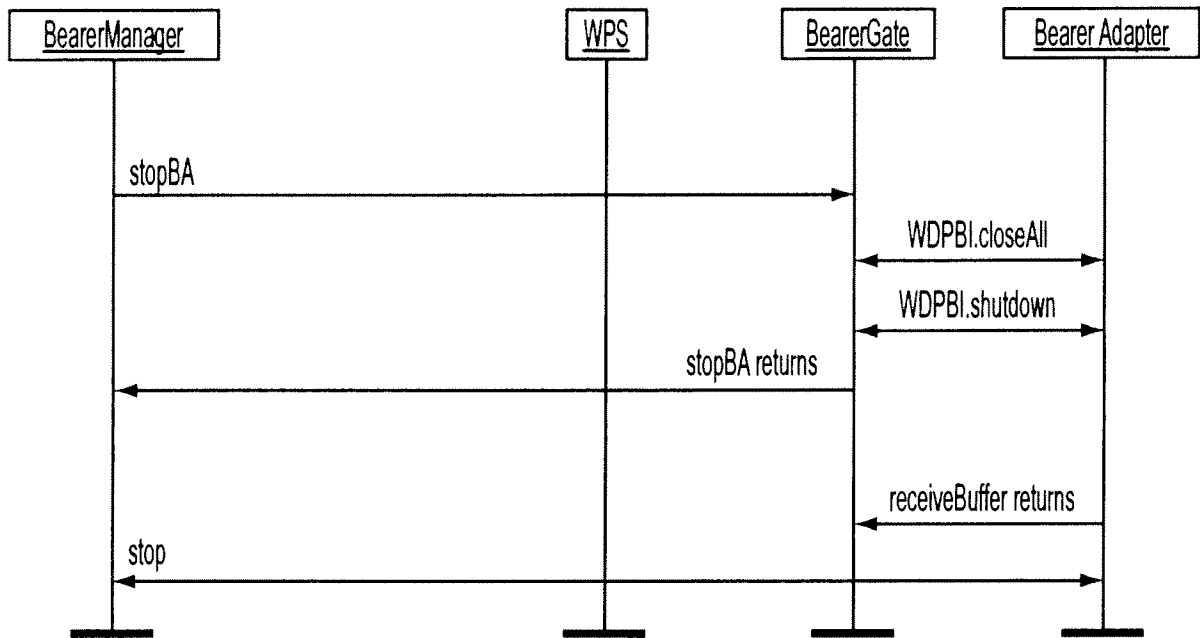


FIG. 7c

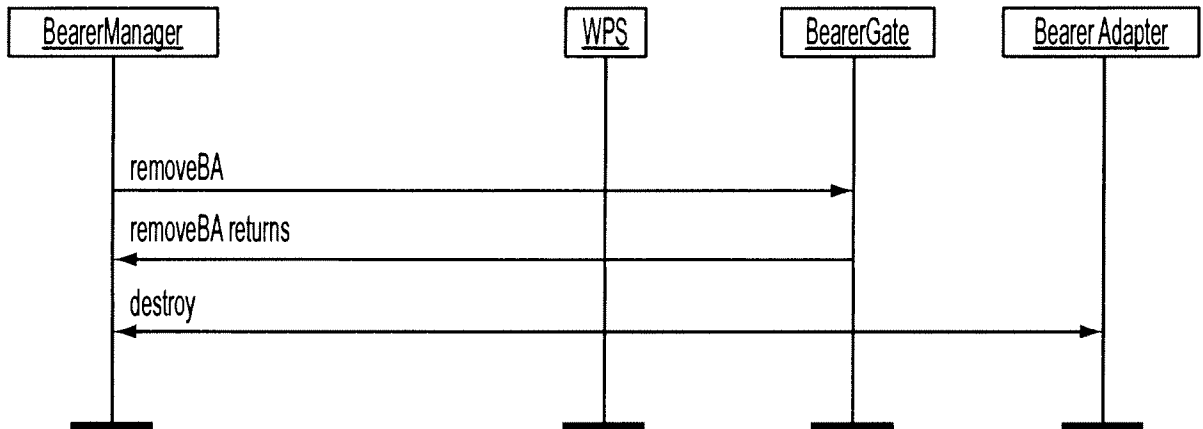


FIG. 7d